


Lumens Visual Presenter :

Basic setup to use Visual Presenter for Live Images/Documents/slides

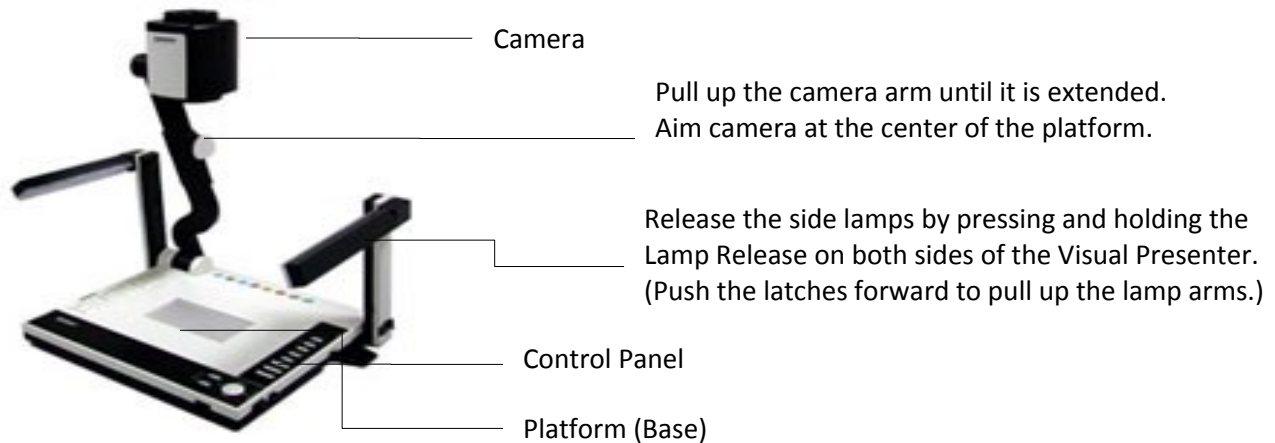

Important: The angle range of the camera/lamp arm/lamp is limited. Do not turn it forcefully when it reaches the maximal angle.

(The **Remote Control** unit or the **Control Panel** on the Visual Presenter can be used to activate the machine.)

On the Visual Presenter:

1. Press **Power Button** to activate the camera and lamps.
Documents or images placed on the platform will be autofocused.
2. Place document, image, or slide on platform under camera.
3. To view a slide or illuminate an image/object, press the **Lamp** button to activate the backlight.
Press button twice to turn camera and side lamps back on.
4. Press the **Freeze** button to freeze a current image to temporarily stay on the screen.
Press button again to defreeze.
5. To decrease or increase the view of an image or document, use the **Zoom** button at bottom of platform.
 - Enlarge view - press the top arrow of the **Zoom** button (+)

- Decrease view - press the bottom arrow of the **Zoom** button (-).
6. To rotate image – press the **Rotate** button. (Rotation is 90/180/270 degrees.)
 7. To pan image – press the **Pan** button to sweep across the image or document.
 8. Press the **Power Button** (1-2 seconds) to turn off the machine.

Explanation of the button functions are on the left side of the Visual Presenter.