


### Introduction

Thank you and congratulations on your purchase of the Yamaha PORTABLE PA SYSTEM STAGEPAS 300. The STAGEPAS 300 is a versatile, compact PA system consisting of two speakers and a mixer. In order to get the most out of your new STAGEPAS 300 and its sophisticated functions, we suggest you read through this manual thoroughly. Also keep it in a safe place for future reference.

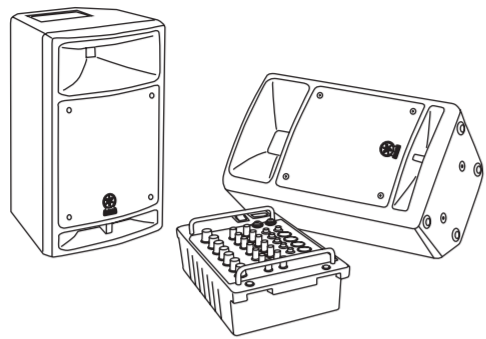

### Features

- **Two-way, 8-inch (20 cm) speaker system**  
The built-in speakers deliver high-quality powerful sound from an exceptionally compact cabinet. The scratch-resistant speakers are rugged enough for outdoor use.
- **Powered mixer**  
The powered mixer is a convenient, high-performance all-in-one unit that includes EQ and reverb. With four mono inputs and two stereo inputs, the STAGEPAS 300 can be connected to a wide range of instruments and devices.
- **Convenient storage**  
The STAGEPAS 300 can be used in even the most cramped quarters, inside or outside, since the mixer is built into one of the speaker cabinets. The other speaker has a special compartment for storing speaker cables and microphones, letting you put all you need for your performance in one convenient place.

**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN  
COVER OR BACK, NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

**Explanation of Graphical Symbols**

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of unshielded "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The explanation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

### IMPORTANT SAFETY INSTRUCTIONS

- Read these instructions.
  - Keep these instructions.
  - Heed all warnings.
  - Follow all instructions.
  - Do not use this apparatus near water.
  - Clean only with dry cloth.
  - Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
  - Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
  - Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
  - Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
  - Only use attachments/accessories specified by the manufacturer.
  - Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tipover.
  - Unplug this apparatus during lightning storms or when unused for long periods of time.
  - Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- WARNING**  
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.  
(98-6520)

### PRECAUTIONS

**PLEASE READ CAREFULLY BEFORE PROCEEDING**  
\* Please keep this manual in a safe place for future reference.

**WARNING**  
Always follow the basic precautions listed below to avoid the possibility of serious injury or even death from electrical shock, short-circuiting, damages, fire or other hazards. These precautions include, but are not limited to, the following:

- Power supply/Power cord**
  - Only use the voltage specified as correct for the device. The required voltage is printed on the nameplate on the back of the device.
  - Use only the included power cord.
  - Do not place the power cord near heat sources such as heaters or radiators, and do not excessively bend or otherwise damage the cord, place heavy objects on it, or place it in a position where anyone could walk on, trip over, or roll anything over it.
- Water warning**
  - Do not expose the device to rain, use it near water or in damp or wet conditions, or place containers on it containing liquids which might spill into any openings.
  - Never insert or remove an electric plug with wet hands.
- If you notice any abnormality**
  - If the power cord or plug becomes frayed or damaged, or if there is a sudden loss of sound during use of the device, or if any unusual smells or smoke should appear to be caused by it, immediately turn off the power switch, disconnect the electric plug from the outlet, and have the device inspected by qualified Yamaha service personnel.
  - If this device should be dropped or damaged, immediately turn off the power switch, disconnect the electric plug from the outlet, and have the device inspected by qualified Yamaha service personnel.
- Do not open**
  - Do not open the device or attempt to disassemble the internal parts or modify them in any way. The device contains no user-serviceable parts. If it should appear to be malfunctioning, discontinue use immediately and have it inspected by qualified Yamaha service personnel.

**CAUTION**  
Always follow the basic precautions listed below to avoid the possibility of physical injury to you or others, or damage to the device or other property. These precautions include, but are not limited to, the following:

- Power supply/Power cord**
  - Remove the electric plug from the outlet when the device is not to be used for extended periods of time, or during electrical storms.
  - When removing the electric plug from the device or an outlet, always hold the plug itself and not the cord. Pulling by the cord can damage it.
- Location**
  - Before moving the device, remove all connected cables.
  - Do not use the device in a confined, poorly-ventilated location. Make sure that there is adequate space between the mixer and surrounding walls or other devices: at least 30 cm at the sides, 30 cm behind and 30 cm above. If the mixer is to be used installed into the speaker cabinet, make sure to allow adequate space between the speaker and the surrounding walls or other devices: at least 30 cm at the sides, 30 cm behind and 30 cm above. Inadequate ventilation can result in overheating, possibly causing damage to the device(s), or even fire.
  - Do not place the device in an unstable position where it might accidentally fall over.
  - Do not block the vents. This mixer has ventilation holes at the top to prevent the internal temperature from becoming too high. In particular, do not place the device on its side or upside down. Inadequate ventilation can result in overheating, possibly causing damage to the device(s), or even fire.
  - Do not use the device in the vicinity of a TV, radio, stereo equipment, mobile phone, or other electric devices. Doing so may result in noise, both in the device itself and in the TV or radio next to it.
- Connections**
  - Before connecting the device to other devices, turn off the power for all devices. Before turning the power on or off for all devices, set all volume levels to minimum.
  - For the SPEAKERS jacks, use only the included speakers and speaker cables. Use of other types of speakers and cables may result in damage to the device(s), or even fire.

**Handling caution**

- When turning on the AC power in your audio system, always turn on the device LAST, to avoid speaker damage. When turning the power off, the device should be turned off FIRST for the same reason.
- Do not insert your fingers or hands in any gaps or openings on the device (vents, ports, etc.).
- Avoid inserting or dropping foreign objects (paper, plastic, metal, etc.) into any gaps or openings on the device (vents, ports, etc.) If this happens, turn off the power immediately and unplug the power cord from the AC outlet. Then have the device inspected by qualified Yamaha service personnel.
- Do not use the device for a long period of time at a high or uncomfortable volume level, since this can cause permanent hearing loss. If you experience any hearing loss or ringing in the ears, consult a physician.
- Do not operate the device if the sound is distorting. Prolonged use in this condition could cause overheating and result in fire.
- Do not rest your weight on the device or place heavy objects on it, and avoid use excessive force on the buttons, switches or connectors.

XLR-type connectors are wired as follows (IEC60268 standard): pin 1: ground, pin 2: hot (+), and pin 3: cold (-).

**Interference From Cell Phones**  
Using a cell phone near the speaker system can induce noise. If this occurs, move the cell phone further away from the speaker system.

Yamaha cannot be held responsible for damage caused by improper use or modifications to the device.

Always turn the power off when the device is not in use.  
The performance of components with moving contacts, such as switches, volume controls, and connectors, deteriorates over time. Consult qualified Yamaha service personnel about replacing defective components.

Illustrations in this manual are for explanatory purposes only, and may not match the actual appearance of the product during operation.  
Company names and product names used in this Owner's Manual are trademarks or registered trademarks of their respective owners.


### Package Contents

Two speakers, mixer, panel, power cord, two speaker cables, Owner's Manual (this booklet)  
**NOTE:** The mixer and the panel are installed in the speakers when the STAGEPAS 300 leaves the factory.


## Before turning on the mixer

### Remove the mixer

- Be sure that the mixer's power switch is turned off.
- Use a screwdriver or coin to turn each screw on the mixer from LOCK to OPEN until it clicks.

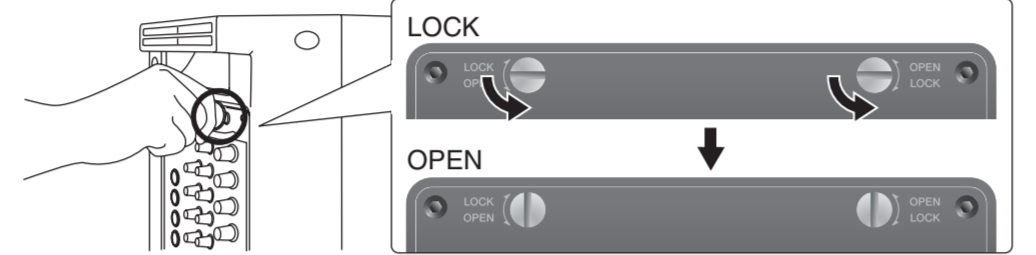

- Securely hold the mixer's handles to remove it from the speaker.

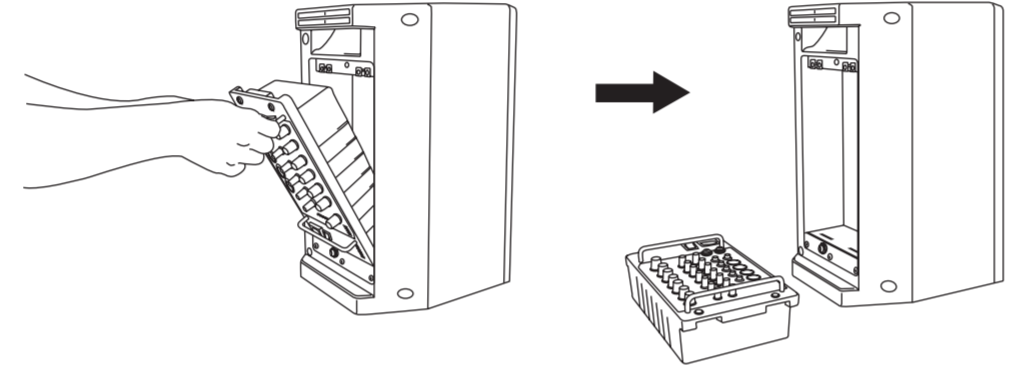


**CAUTION** Use only the mixer's handles when removing the mixer from the speaker and when carrying the mixer separate from the speaker.

**NOTE:** The mixer can also be used when installed in the speaker.

When you install the mixer into the speaker to match the indentations on the speaker cabinet to the corresponding parts on the mixer, and then turn each screw from OPEN to LOCK until it clicks.

## Power supply connections


- Make sure that the mixer's power switch is turned off.
- Connect the included power cord to the [AC IN] jack.

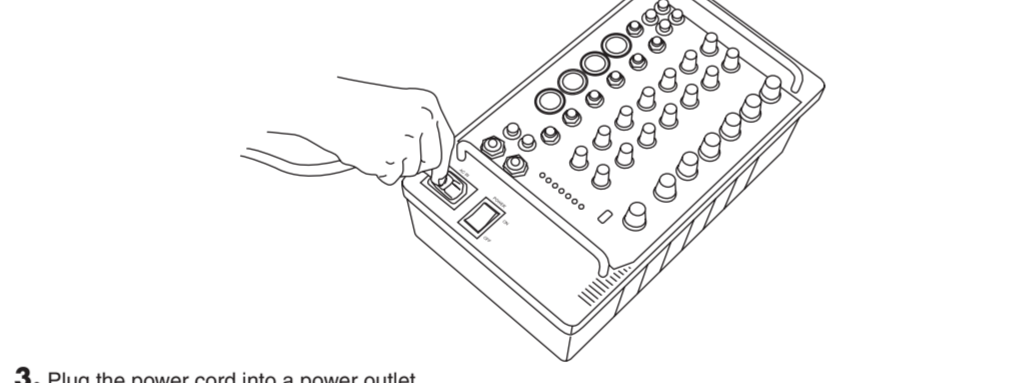

## Turning the power on/off

- To avoid any loud, unexpected noise from the speakers, first turn on the power to those connected devices that are closest to the sound source.  
Example: Sound source (CD player or instrument) → STAGEPAS 300  
When turning off the power to the system, reverse the order described above.
- Before turning on the power, set the LEVEL controls and MASTER LEVEL control to their minimum setting (zero).

Press the mixer's power switch to the ON position (the POWER indicator lights).  
To turn the power off, press the power switch to the OFF position (the POWER indicator turns off).

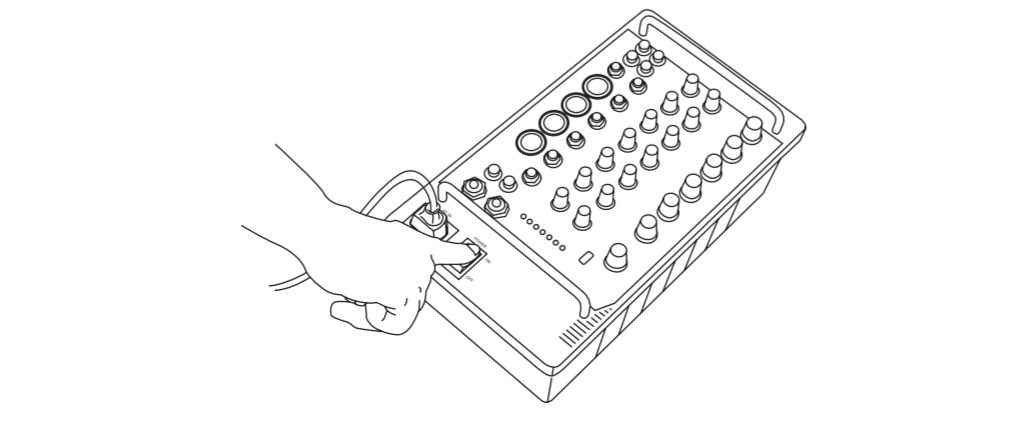

## Troubleshooting

- Power does not turn on**
  - Is the included power cord correctly connected to a power outlet?
- Power shuts down suddenly**
  - Is the volume set at high for an extended period of time?  
If the mixer is used at a volume beyond the permissible level, the protection circuit automatically turns the power off. Turn on the power again only after the mixer cools, since it cannot be turned on until the internal temperature goes down. Reduce the volume with the MASTER LEVEL control so that the LIMITER indicator flashes only briefly in response to the highest transient peaks.
  - Is the vent on the top panel of the mixer blocked?  
Since inadequate ventilation can result in overheating the mixer, the protection circuit may come on automatically and the power may be turned off.  
Turn on the power again only after the mixer cools, since it cannot be turned on until the internal temperature goes down.
- No sound is heard**
  - Are external instruments (including a microphone) or speakers correctly connected to the mixer?
  - Are the LEVEL controls of all relevant channels and/or the MASTER LEVEL control set to appropriate levels?
  - Are the SPEAKER L/R jacks connected to the included speakers?
  - Is the POWER indicator flashing?  
There may be a short in the speaker cable or the connection may be faulty. Check that the speaker cable is correctly connected to the mixer and reapply the power.
  - If sound is not still output, contact your Yamaha dealer.
- Sound is interrupted**
  - Is the volume set too high?  
If the mixer is used at a volume beyond the permissible level, the sound may be interrupted as the protection circuit automatically turns the power off and resets repeatedly.  
Reduce the volume with the MASTER LEVEL control so that the LIMITER indicator flashes only briefly on the highest transient peaks.

### Sound is distorted or noise is produced

- Are the LEVEL controls of all relevant channels and/or the MASTER LEVEL control set to appropriate levels?
- Are the MIC/LINE switches of each channels set appropriately?
- Are both XLR type and phone type jacks on channels 1-4 being used (connected) at the same time?  
Please connect to only one of these jacks on each channel.
- Is the input signal from the connected device set to an appropriate level?

### Sound is not loud enough

- Are the LEVEL controls of all relevant channels and/or the MASTER LEVEL control set to appropriate levels?
- Are the MIC/LINE switches of each channels set appropriately?
- Are both XLR type and phone type jacks on channels 1-4 being used (connected) at the same time?  
Please connect to only one of these jacks on each channel.
- Is the input signal from the connected device set to an appropriate level?

### Reverb is not applied to the sound

- Are the REVERB switches of each channels set to ON ( )?
- Is the REVERB control set to an appropriate level?

### Getting a more powerful sound from the speakers

- Is the SPEECH/MUSIC switch set to MUSIC ( )?
- Are the Equalizer controls (HIGH/LOW) set to appropriate levels?

### Getting a clearer sound for announcements

- Is the SPEECH/MUSIC switch set to SPEECH ( )?
- Are the Equalizer controls (HIGH/LOW) set to appropriate levels?


### Using a single speaker

- You can use a single speaker. If you use a single speaker, the mixer outputs just one channel of the stereo signal, left or right.


### Outputting the signal for monitoring

- Connect a powered speaker to the MONITOR OUT jack. The MONITOR OUT jack outputs the signal prior to routing through the MASTER LEVEL control. Adjust the level of output signal from the MONITOR OUT jack with the MONITOR OUT control. The MONITOR OUT control does not affect the MASTER LEVEL control. If the signals are output from the L (left) MONITOR OUT jack, the mixer feeds the mixed L and R signals to the jack.

## Block Diagram

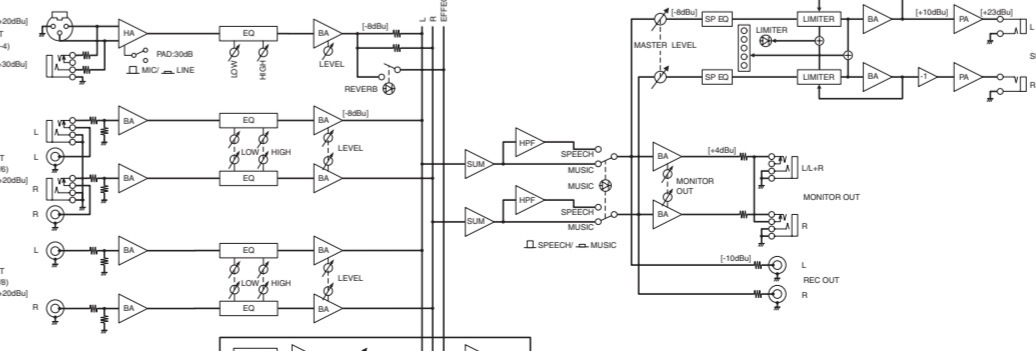

## Dimensions

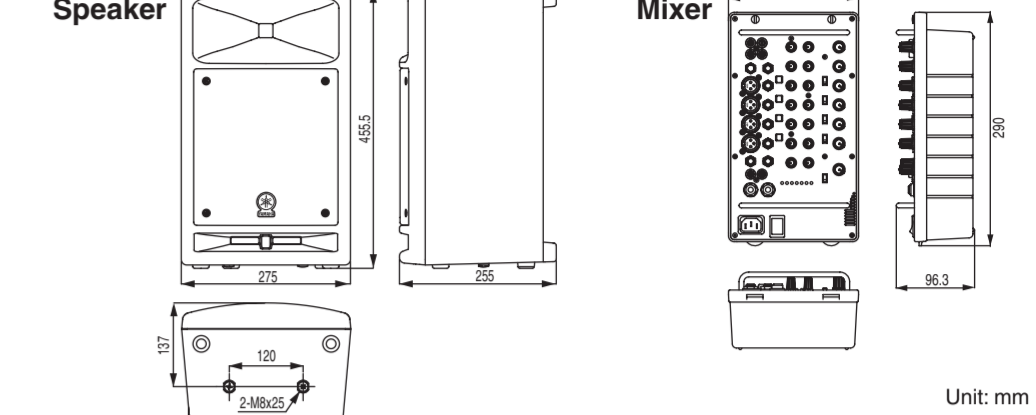

## Specifications

- **General Specifications**  
**Maximum Output Power**  
150 W-150 W @ 10% THD at 1 kHz (SPEAKER L/R)  
≥100 W-100 W @ 1% THD at 1 kHz (SPEAKER L/R)
  - Frequency Response**  
-3 dB, 0 dB, +1 dB @20 Hz-20 kHz, 1 W Output/6 Ω (Without MUSIC/SPEECH, EQ and SP EQ Circuit) (SPEAKER L/R)  
-3 dB, 0 dB, +1 dB @20 Hz-20 kHz, +4 dBu 10 kΩ Load (MUSIC/SPEECH switch=MUSIC (MONITOR OUT, REC OUT))
  - Total Harmonic Distortion**  
≤1% @ 1 kHz, 50 W Output Power (SPEAKER L/R)  
≤0.5% @20 Hz-20 kHz, +14 dBu 10 kΩ (MONITOR OUT, REC OUT)
  - Hum & Noise (20 Hz-20 kHz, Rs=150 Ω, MIC/LINE switch=MIC)**  
≤-65 dBu Residual output noise (SPEAKER L/R)  
≤-90 dBu Residual output noise (MONITOR OUT, REC OUT)  
≤-67 dBu MONITOR OUT control & one CH level control at nominal level (CH1-4)(MONITOR OUT)
  - Crosstalk (1 kHz)**  
≤-70 dB between input channels
  - Weight**  
18 kg (mixer and two speakers)
  - Power Consumption**  
70 W
  - Stereo Input Channel Equalization:**  
Shelving turnover/roll-off frequency: 3 dB before maximum cut or boost.  
±15 dB  
HIGH: 10 kHz shelving  
LOW: 100 Hz shelving
  - **Speaker Enclosure**  
Bass-reflex type  
**Speaker Unit**  
LF: 8" (20 cm) Cone  
HF: 1" (2.54 cm) Compression Driver
  - Cross Over Frequency**  
4 kHz
  - Frequency Range**  
55 Hz-20 kHz
  - Maximum Output Level**  
112 dB (1 m)
- Specifications and descriptions in this owner's manual are for information purposes only. Yamaha Corp. reserves the right to change or modify products or specifications at any time without prior notice. Since specifications, equipment or options may not be the same in every locale, please check with your Yamaha dealer.  
European models: Purchaser/User Information specified in EN65103-1 and EN65103-2.  
Inrush Current: 48A  
Comforms to Environments: E1, E2, E3 and E4

**FCC INFORMATION (U.S.A.)**

**1. IMPORTANT NOTICE: DO NOT MODIFY THIS UNIT!**  
This product, when installed as indicated in the instructions contained in this manual, meets FCC requirements. Modifications not expressly approved by Yamaha may void your warranty, granted by the FCC, for use of this product.

**2. IMPORTANT:** When connecting this product to accessories and/or other product use only high quality shielded cables. Cables supplied with this product MUST be used. Follow all installation instructions. Failure to follow instructions could void your FCC authorization to use this product in the USA.

**3. NOTE:** This product has been tested and found to comply with the requirements listed in FCC Regulations, Part 15 for Class "B" digital devices. Compliance with these requirements provides a reasonable level of assurance that your use of this product in a residential environment will not result in harmful interference with other electronic devices. The equipment manufacturer, Yamaha Corporation of America, Electronic Service Division, 6600 Orangethorpe Ave., Buena Park, CA 92620. The above statements apply ONLY to those products distributed by Yamaha Corporation of America or its subsidiaries.

\* This applies only to products distributed by YAMAHA CORPORATION OF AMERICA. (USA only)

**IMPORTANT NOTICE FOR THE UNITED KINGDOM**  
Connecting the Plug and Cord

As the colors of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:  
The wire which is coloured GREEN and YELLOW must be connected to the terminal in the plug which is marked by the letter E or by the safety symbol or colored GREEN or GREEN-and-YELLOW.  
The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or colored BLACK.  
The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or colored RED.

\* This applies only to products distributed by Yamaha-Kemble Music (U.K.) Ltd. (UK only)

<p><b>NORTH AMERICA</b></p> <p><b>CANADA</b> Yamaha Canada Music Ltd. 135 Miller Avenue, Scarborough, Ontario, M1S 3R1, Canada Tel: 416-298-1311</p> <p><b>U.S.A.</b> Yamaha Corporation of America 6600 Orangethorpe Ave., Buena Park, Calif. 92620, U.S.A. Tel: 714-522-9011</p>	<p><b>POLAND</b> Yamaha Music Central Europe GmbH Sp. z o.o. Ostódzki w Polsce ul. 17 Syczyńska 58, PL-02-146 Warszawa, Poland Tel: 022-868-07-57</p> <p><b>THE NETHERLANDS/ BELGIUM/LUXEMBOURG</b> Yamaha Music Central Europe GmbH, Branch Benelux Clarisserhof 5-5, 4133 AB Nieuw, The Netherlands Tel: 020-595-040</p> <p><b>FRANCE</b> Yamaha Musique France BP 70-7312 Marie-la-Vallée Cedex 2, France Tel: 01-44-41-4200</p> <p><b>ITALY</b> Yamaha Music Italia S.p.A. Combo Division Viale Italia 88, 20020 Lanate (Milano), Italy Tel: 02-955-771</p> <p><b>SPAIN/PORTUGAL</b> Yamaha-Hazen Música, S.A. Ctra. de la Coruna km. 17, 280, 28230 Las Rozas (Madrid), Spain Tel: 91-639-8888</p> <p><b>SWEDEN</b> Yamaha Scandinavia AB J. A. Wettergrens Gata 1 Box 3005 5-400-43 Göteborg, Sweden Tel: 031-89-34-00</p> <p><b>DENMARK</b> YS Copenhagen Liaison Office Generatørvæj 6A DK-2720 Høvelø, Denmark Tel: 44 92 49 00</p> <p><b>NORWAY</b> Horsk Høll av Yamaha Scandinavia AB Gren Høllveien 1 N-1345 Østero, Norway Tel: 67 16 77 70</p>	<p><b>ASIA</b></p> <p><b>THE PEOPLE'S REPUBLIC OF CHINA</b> Yamaha Music &amp; Electronics (China) Co., Ltd. 25/F., United Plaza, 1468 Nanjing Road (West), Jingan, Shanghai, China Tel: 021-6247-2211</p> <p><b>INDONESIA</b> PT. Yamaha Music Indonesia (Distributor) PT. Nusantik Gedung Yamaha Music Center, Jalan Jend. Gatot Subroto Kav. 4, Jakarta 12930, Indonesia Tel: 21-505-2577</p> <p><b>KOREA</b> Yamaha Music Korea Ltd. 8F, 9F, Donggung Bldg. 158-9 Samsung-Dong, Kangnam-Gu, Seoul, Korea Tel: 02-345-0022</p> <p><b>MALAYSIA</b> Yamaha Music Malaysia, Sdn. Bhd. Lot 8, Jalan Perbandaran, 47001 Kelana Jaya, Petaling Jaya, Selangor, Malaysia Tel: 3-7620300</p> <p><b>SINGAPORE</b> Yamaha Music Asia Pte., Ltd. #03-11 &amp; 2 Building 140 Poyia Labor Road, Singapore 409015 Tel: 747-4374</p> <p><b>TAIWAN</b> Yamaha MHS Music Co., Ltd. 3F, #6, Sec. 2, Nan Jing E. Rd. Taipei, Taiwan 104, R.O.C. Tel: 02-251-16688</p> <p><b>THAILAND</b> Siam Yamaha Co., Ltd. 89/11 Siam Motors Building, 15-16 floor Rama 1 road, Wangmai, Pathumwan Bangkok 10330, Thailand Tel: 02-215-2520</p> <p><b>OTHER ASIAN COUNTRIES</b> Yamaha Corporation, Asia-Pacific Music Marketing Group Nakazawa-cho 10-1, Naka-ku, Hamamatsu, Japan 430-8650 Tel: +81-53-460-2317</p>
<p><b>THE UNITED KINGDOM</b> Yamaha-Kemble Music (U.K.) Ltd. Sherbourne Drive, Tibrook, Milton Keynes, MK7 8SL, England Tel: 01908-366700</p>	<p><b>GERMANY</b> Yamaha Music Central Europe GmbH Siemensstraße 22-34, 25462 Hellingen, Germany Tel: 04101-3030</p> <p><b>SWITZERLAND/LIECHTENSTEIN</b> Yamaha Music Central Europe GmbH, Branch Switzerland Seefeldstrasse 94, 8008 Zürich, Switzerland Tel: 01-383 3900</p> <p><b>AUSTRIA</b> Yamaha Music Central Europe GmbH, Branch Austria Schlegelgasse 20, A-1100 Wien, Austria Tel: 01-60203900</p> <p><b>CZECH REPUBLIC/SLOVAKIA/ HUNGARY/SLOVENIA</b> Yamaha Music Central Europe GmbH, Branch Austria, CEE Department Schlegelgasse 20, A-1100 Wien, Austria Tel: 01-60203925</p>	<p><b>AFRICA</b> Yamaha Corporation, Asia-Pacific Music Marketing Group Nakazawa-cho 10-1, Naka-ku, Hamamatsu, Japan 430-8650 Tel: +81-53-460-2313</p> <p><b>MIDDLE EAST</b> <b>TURKEY/CYPRUS</b> Yamaha Music Central Europe GmbH Siemensstraße 22-34, 25462 Hellingen, Germany Tel: 04101-3030</p> <p><b>OTHER COUNTRIES</b> Yamaha Music Central Europe GmbH Nakazawa-cho 10-1, Naka-ku, Hamamatsu, Japan 430-8650 Tel: +81-53-460-2313</p>
<p><b>EUROPE</b></p> <p><b>THE UNITED KINGDOM</b> Yamaha-Kemble Music (U.K.) Ltd. Sherbourne Drive, Tibrook, Milton Keynes, MK7 8SL, England Tel: 01908-366700</p>	<p><b>GERMANY</b> Yamaha Music Central Europe GmbH Siemensstraße 22-34, 25462 Hellingen, Germany Tel: 04101-3030</p> <p><b>SWITZERLAND/LIECHTENSTEIN</b> Yamaha Music Central Europe GmbH, Branch Switzerland Seefeldstrasse 94, 8008 Zürich, Switzerland Tel: 01-383 3900</p> <p><b>AUSTRIA</b> Yamaha Music Central Europe GmbH, Branch Austria Schlegelgasse 20, A-1100 Wien, Austria Tel: 01-60203900</p> <p><b>CZECH REPUBLIC/SLOVAKIA/ HUNGARY/SLOVENIA</b> Yamaha Music Central Europe GmbH, Branch Austria, CEE Department Schlegelgasse 20, A-1100 Wien, Austria Tel: 01-60203925</p>	<p><b>ASIA</b></p> <p><b>THE PEOPLE'S REPUBLIC OF CHINA</b> Yamaha Music &amp; Electronics (China) Co., Ltd. 25/F., United Plaza, 1468 Nanjing Road (West), Jingan, Shanghai, China Tel: 021-6247-2211</p> <p><b>INDONESIA</b> PT. Yamaha Music Indonesia (Distributor) PT. Nusantik Gedung Yamaha Music Center, Jalan Jend. Gatot Subroto Kav. 4, Jakarta 12930, Indonesia Tel: 21-505-2577</p> <p><b>KOREA</b> Yamaha Music Korea Ltd. 8F, 9F, Donggung Bldg. 158-9 Samsung-Dong, Kangnam-Gu, Seoul, Korea Tel: 02-345-0022</p> <p><b>MALAYSIA</b> Yamaha Music Malaysia, Sdn. Bhd. Lot 8, Jalan Perbandaran, 47001 Kelana Jaya, Petaling Jaya, Selangor, Malaysia Tel: 3-7620300</p> <p><b>SINGAPORE</b> Yamaha Music Asia Pte., Ltd. #03-11 &amp; 2 Building 140 Poyia Labor Road, Singapore 409015 Tel: 747-4374</p> <p><b>TAIWAN</b> Yamaha MHS Music Co., Ltd. 3F, #6, Sec. 2, Nan Jing E. Rd. Taipei, Taiwan 104, R.O.C. Tel: 02-251-16688</p> <p><b>THAILAND</b> Siam Yamaha Co., Ltd. 89/11 Siam Motors Building, 15-16 floor Rama 1 road, Wangmai, Pathumwan Bangkok 10330, Thailand Tel: 02-215-2520</p> <p><b>OTHER ASIAN COUNTRIES</b> Yamaha Corporation, Asia-Pacific Music Marketing Group Nakazawa-cho 10-1, Naka-ku, Hamamatsu, Japan 430-8650 Tel: +81-53-460-2317</p>
<p><b>EUROPE</b></p> <p><b>THE UNITED KINGDOM</b> Yamaha-Kemble Music (U.K.) Ltd. Sherbourne Drive, Tibrook, Milton Keynes, MK7 8SL, England Tel: 01908-366700</p>	<p><b>GERMANY</b> Yamaha Music Central Europe GmbH Siemensstraße 22-34, 25462 Hellingen, Germany Tel: 04101-3030</p> <p><b>SWITZERLAND/LIECHTENSTEIN</b> Yamaha Music Central Europe GmbH, Branch Switzerland Seefeldstrasse 94, 8008 Zürich, Switzerland Tel: 01-383 3900</p> <p><b>AUSTRIA</b> Yamaha Music Central Europe GmbH, Branch Austria Schlegelgasse 20, A-1100 Wien, Austria Tel: 01-60203900</p> <p><b>CZECH REPUBLIC/SLOVAKIA/ HUNGARY/SLOVENIA</b> Yamaha Music Central Europe GmbH, Branch Austria, CEE Department Schlegelgasse 20, A-1100 Wien, Austria Tel: 01-60203925</p>	<p><b>AFRICA</b> Yamaha Corporation, Asia-Pacific Music Marketing Group Nakazawa-cho 10-1, Naka-ku, Hamamatsu, Japan 430-8650 Tel: +81-53-460-2313</p> <p><b>MIDDLE EAST</b> <b>TURKEY/CYPRUS</b> Yamaha Music Central Europe GmbH Siemensstraße 22-34, 25462 Hellingen, Germany Tel: 04101-3030</p> <p><b>OTHER COUNTRIES</b> Yamaha Music Central Europe GmbH Nakazawa-cho 10-1, Naka-ku, Hamamatsu, Japan 430-8650 Tel: +81-53-460-2313</p>

# STAGEPAS 300



## Quick Guide

### Getting sound out of the system

Using the included speakers, set up the system and try it out.


#### 1 Connect the included speakers and your instruments to the mixer.

Connect the included speakers to the SPEAKER L/R jack. Connect the sources (guitar, other instruments) to the input jacks. For details, see "Connection Example."

**Caution:** Before connecting any devices, make sure to turn off the power for all devices (including microphones). Also, before turning the power on or off, set the volume levels on all devices to minimum.


**NOTE:** For best results when connecting an electric guitar or bass guitar to the mixer, use a direct box, preamp (guitar amp), or amp simulator.

#### 2 Set the mixer's LEVEL controls and MASTER LEVEL control to the minimum (zero).

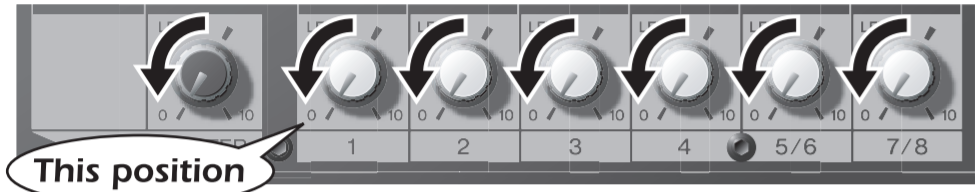

#### 3 Depending on the device used, set the MIC/LINE switch to MIC ( ) or LINE ( ) as appropriate.

For low-level signals (such as that of microphones), set the switch to the MIC ( ) position. For high-level signals (such as keyboard instruments and audio equipment), set the switch to the LINE ( ) position.

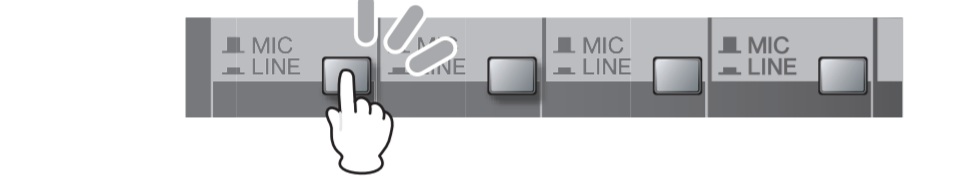


#### 4 Turning the power on


First, turn on the power to any connected devices, then turn the STAGEPAS 300 power on. If you've connected powered speakers to the mixer, turn on the power of the mixer first, then the powered speakers.

**Caution:** To avoid any loud, unexpected noise from the speakers, first turn on the power to those connected devices that are closest to the sound source.

Example: Sound source (CD player or instrument) → STAGEPAS 300 → (Power amplifier) When turning off the power to the system, reverse the order described above.

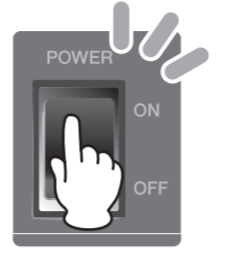


#### 5 Set the MASTER LEVEL control to the optimum position (indicated by the arrow).

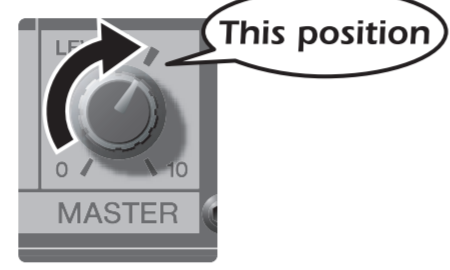

#### 6 While playing your instrument or singing into the microphone, adjust the LEVEL control of the corresponding channel.

Adjust the LEVEL Control of the corresponding channel so that the "0" LED lights up momentarily.

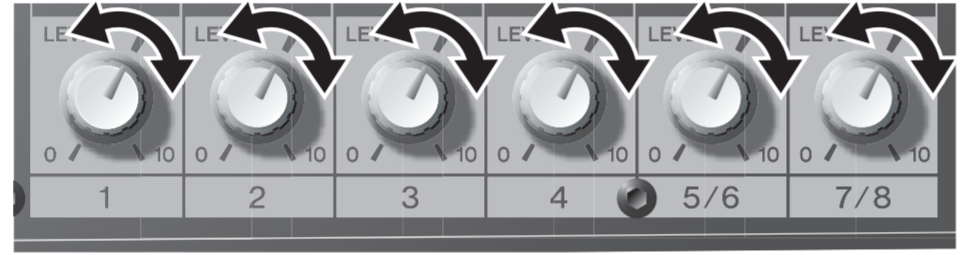

#### 7 Use the MASTER LEVEL control to adjust the overall volume.


**Caution:** If the LIMITER indicator flashes continuously, the internal power amplifier section is being excessively overloaded and may malfunction.



### Applying reverb or echo to the sound

Reverb recreates the warm ambience of an actual performance space, such as a concert hall or a night club.

#### 1 For each channel you want to apply reverb, set the corresponding REVERB switch to ON ( ).

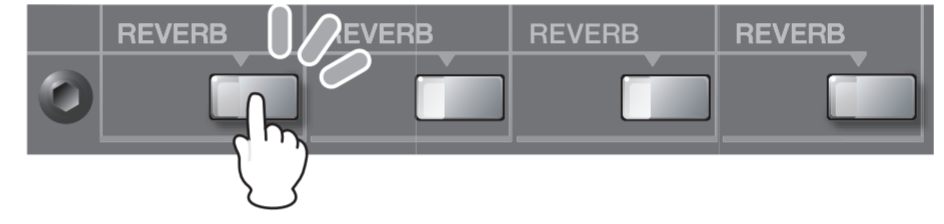

#### 2 Use the REVERB control to adjust the overall reverb.




## Connection Example

The STAGEPAS 300 can be used in a wide variety of sound reinforcement applications, from a full-band performance onstage to solo street performance—providing a powerful, high-performance system in an exceptionally compact and portable package.

Connect a guitar or a microphone to the monaural input jacks (channels 1 to 4) and connect a keyboard to the stereo input jacks (channels 5/6 or 7/8). If you have a powered speaker, you can connect it to the MONITOR OUT jack for monitoring your vocals. For optimum results in band performance applications and to create a more powerful sound for music, make sure to set the SPEECH/MUSIC switch to MUSIC.

**NOTE:** For best results when connecting an electric guitar or bass guitar to the mixer, use a direct box, preamp (guitar amp), or amp simulator.

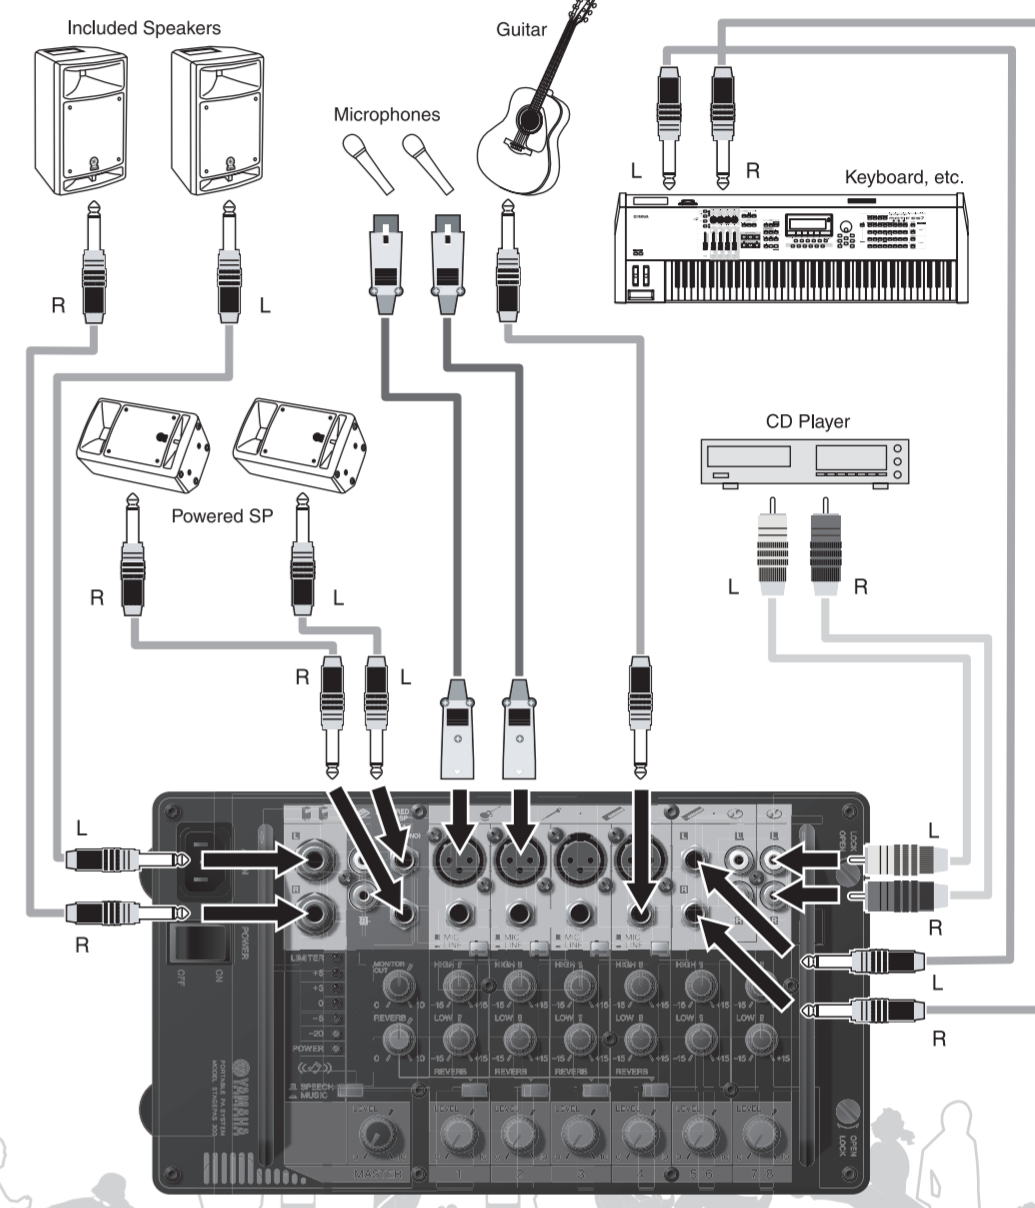

## Controls and Functions

**1 AC IN jack**  
Connect the included power cable here.

**Caution:** Be sure to use the included power cord. Use of other cords may result in malfunction, heat generation, or fire.

**2 POWER switch**  
For turning the power to the mixer on and off.

**16 LEVEL meter**  
The LEVEL meter shows the level of the output signal from the SPEAKER L/R jacks.

**Caution:** If the LIMITER flashes continuously, the internal power amplifier section is being excessively overloaded and may malfunction. Reduce the output level with the MASTER LEVEL control so that the indicator flashes only briefly on the highest transient peaks.

**17 POWER indicator**  
This lights when the POWER switch is ON. When the indicator flashes, the protection circuit is operating. Check that the speaker cable is correctly connected to the mixer and reapply the power.

**15 MONITOR OUT Control**  
Determines the signal level output from the MONITOR OUT jack.


**NOTE:** The MASTER LEVEL Control does not affect the signal via the MONITOR OUT Control.

**14 SPEECH/MUSIC switch**  
Set this switch to SPEECH ( ) to optimize the mixer settings and sound quality for speech purposes and announcements. Set this to MUSIC ( ) to optimize the mixer for musical performance. The switch lights up in yellow when it is set to MUSIC ( ).

**3 SPEAKER L/R jacks (for included speakers only)**  
These output the mixed signal channels from 1 to 7/8, and the level is adjusted with the MASTER LEVEL control. Connect only the included speakers.

**4 REC OUT L/R jacks**  
These output the mixed signal channels from 1 to 7/8, and the level is unaffected by the MASTER LEVEL control. You can use these jacks, for example, to connect to an external recorder.

**5 MONITOR OUT L (MONO) /R jacks**  
These output the mixed signal channels from 1 to 7/8, and the level is adjusted with the MONITOR OUT control. These jacks are convenient for connecting an external powered speaker for monitoring purposes.

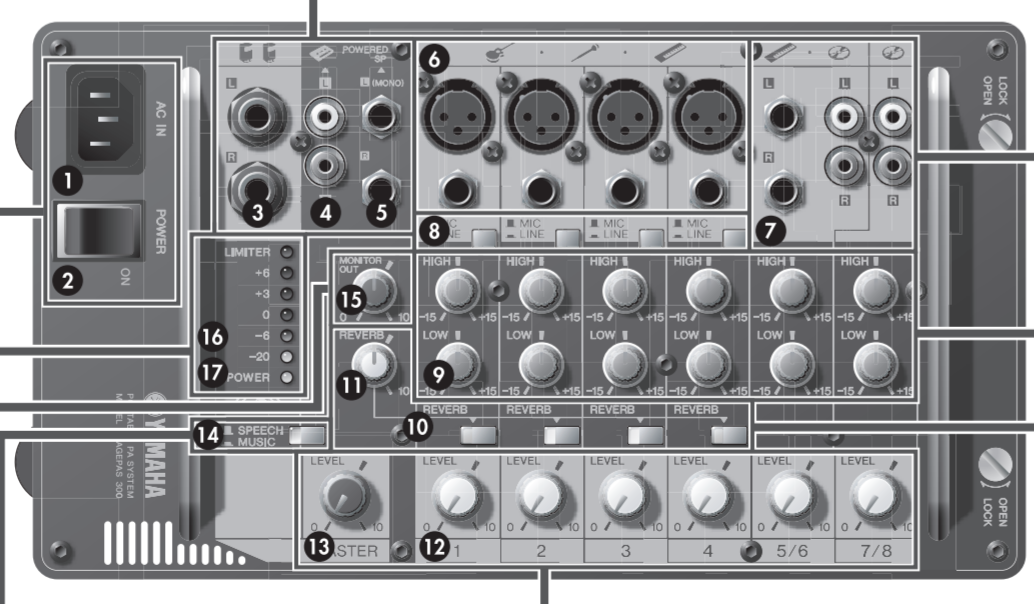

**12 LEVEL control**  
Use these controls to adjust the volume balance among the various channels.

**Caution:** To reduce noise, set any LEVEL controls on unused channels to the minimum.

**13 MASTER LEVEL Control**  
Determines the volume of the signal output from the SPEAKER L/R jacks. This allows you to adjust the overall volume without changing the relative volume balance among the various channels (made with the LEVEL controls) or the tone settings (made with the Equalizer).

**6 Channel input jacks (CH 1 to 4)**  
For connecting a guitar, microphone, keyboard or other instrument/device. For low-level signals (such as that of microphones), set the MIC/LINE switch to the MIC ( ) position. For high-level signals (such as keyboard instruments and audio equipment), set the MIC/LINE switch to the LINE ( ) position.

**NOTE:** On any given channel, you may use either XLR or phone jack, but not both. Please connect to only one of these jacks on each channel.

**7 Stereo channel input jacks (CH 5/6, 7/8)**  
Input the left and right channels of a stereo signal into the respective odd and even channels of the mixer. These inputs are intended mainly for use with instruments and equipment having stereo outputs, such as a synthesizer or CD player.

**NOTE:** The channel 5/6 input provides two sets of jacks—both phone jacks and RCA-pin jacks. Either one of these jacks may be used, but not both at the same time. Please connect to only one of these jacks on each channel.

**8 MIC/LINE switch**  
Set this switch to MIC or LINE for channels 1 to 4, depending on the level of the input signal. For low-level signals (such as that of microphones), set the switch to the MIC ( ) position. For high-level signals (such as keyboard instruments and audio equipment), set the switch to the LINE ( ) position.

**9 Equalizer**

**HIGH** Determines the level of the high frequency band for each channel. Rotating the knob clockwise boosts the high frequencies and produces a clearer, crisper sound. If you start getting feedback (a high-pitched squealing sound) or you want to make the sound softer and less harsh, turn the knob counterclockwise slightly.

**LOW** Determines the level of the low frequency band for each channel. Rotating the knob clockwise boosts the low frequencies and produces a deeper, warmer sound. If you start getting feedback or you want to make the sound less boomy, turn the knob counterclockwise slightly.

**10 REVERB switch**  
Set this switch to ON to recreate the rich ambience of various performance environments, such as a concert hall or a night club. The switch lights up in green when REVERB is ON ( ).

**11 REVERB control**  
Determines the overall level of the reverb or echo that is applied to the output signal. For best results, this level should not be set very high, to avoid possible feedback and to prevent the sound from becoming "muddy" with too much reverb.

**Convenient built-in storage compartment**

Microphones

The STAGEPAS 300 features a convenient storage compartment in the speaker box for packing the included power cable, speaker cable, Owner's Manual (this booklet), and an optional microphone, as shown above. Remove the rear panel of the speaker and put in the things you need. Carry the STAGEPAS 300 with you, and you've got all you need to set up and perform—anywhere, anytime.