











 United States[Support](#) [Products](#) [Contact](#) [Toshiba USA](#)**TOSHIBA**

Mobile Projectors TLP-S71U

Log In 

- Model Home 
- Downloads 
- 2 Support Bulletins 
- Detailed Specs 
- User's Guide 
- Product Tour 
- Resource Guides 
- Select Another Model 
- Express View 
- Printer Friendly Version 

Support Bulletins

No Camera Option When Pressing Input Button

Document ID: 98080923**Posted Date:** 11/17/03**Last Updated:** 11/17/03**Operating System:** N/A**Category:** General**Distribution:** Public**Applicable Models:** [Mobile Projectors](#) TLP-S41U, TLP-T61MU, TLP-S71U, TLP-T71MU

Use of any software made available for download from this system constitutes your acceptance of the Export Control Terms and the terms in the Toshiba end-user license agreement both of which you can [view](#) before downloading any such software.

Issue

[solution survey](#)

No camera option is available when pressing the Input button on the projector or the remote control.

Resolution

Before powering on the projector, make sure the document camera is either connected to the side of the projector or connected with the supplied cable. When connected directly to the side of the projector, be sure the Lock lever is in the locked position and the Connect lever is in the IN position.

COMMENTS:

Never attach or remove the document camera from the projector while it is powered on.


[Solution Survey](#)

Did this information help to resolve your issue?

Yes No Maybe, must test Just browsing

submit

Other Sections

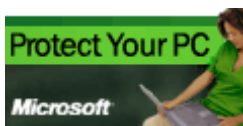

[Privacy Policy](#) [Terms of Use](#)