AV Cabinet #2

Yellow: Handheld Mic

Green: D-band Wireless Mic
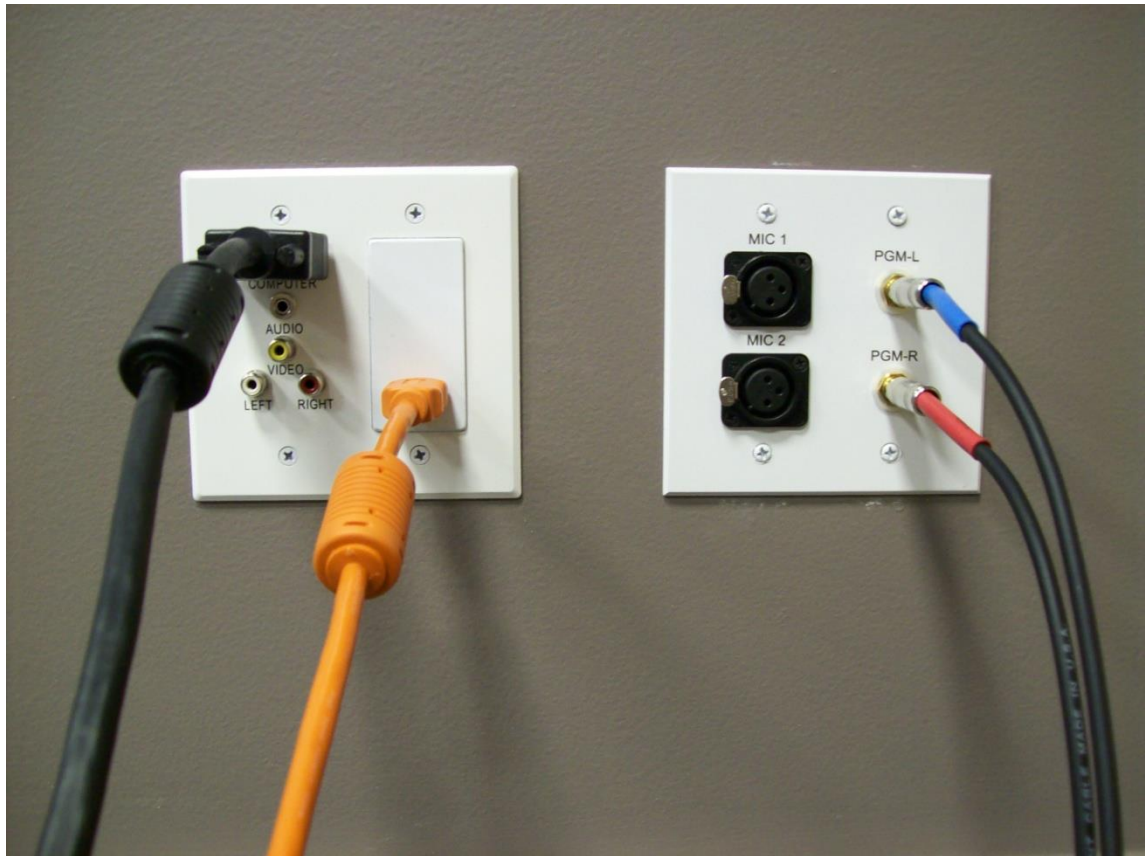
Blue: C-band Wireless Mic

White: Laptop Audio Out
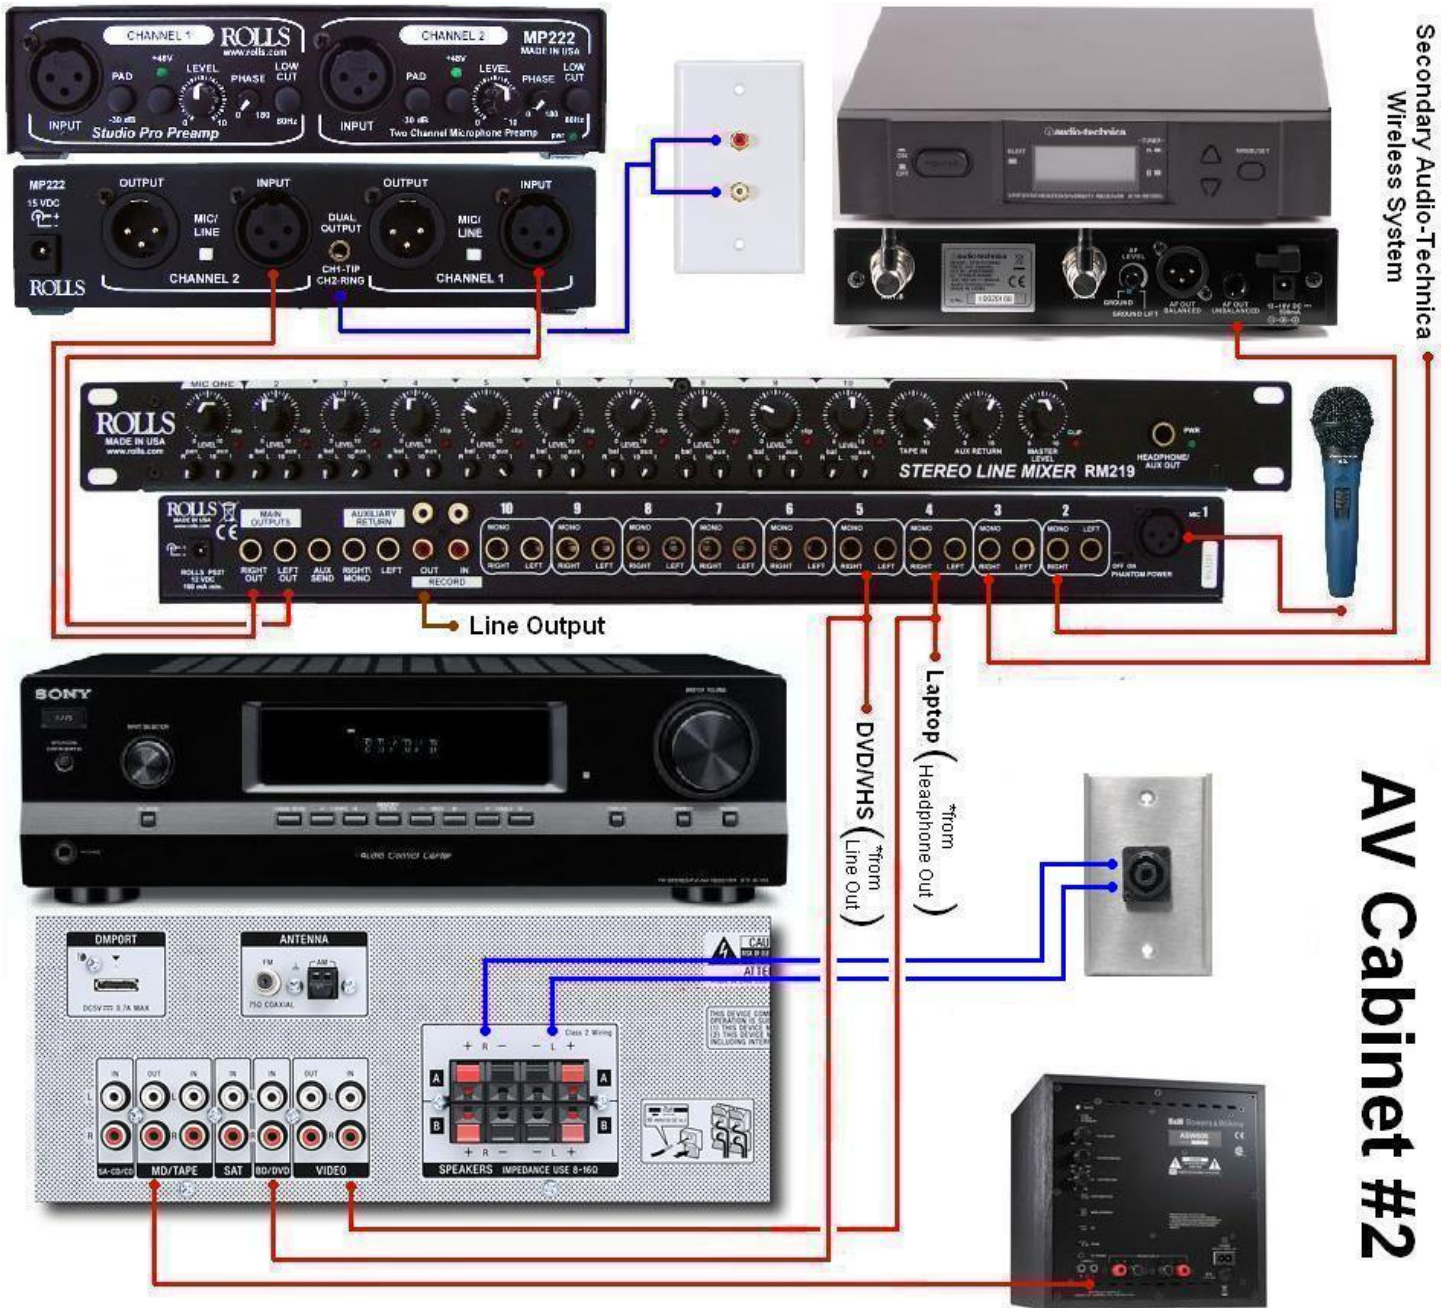
Brown: DVD/VHS Player

Red: External

UCP Room 113 Connections

AV Cabinet #2 Audio Schematic

2013 OLLI-Reston AV Guide by Arman Majumder

UCP Room 113 Audio Control Panel

MIC1 VOL — -∞ dB
MIC2 VOL — -∞ dB
PGM VOL — 10.00 dB

UCP-MEETNG RM AUDIO1

SANCT VOL — -∞ dB
SANCT MUTE — Muted
REAR MUTE — Unmuted

AV Cabinet #1

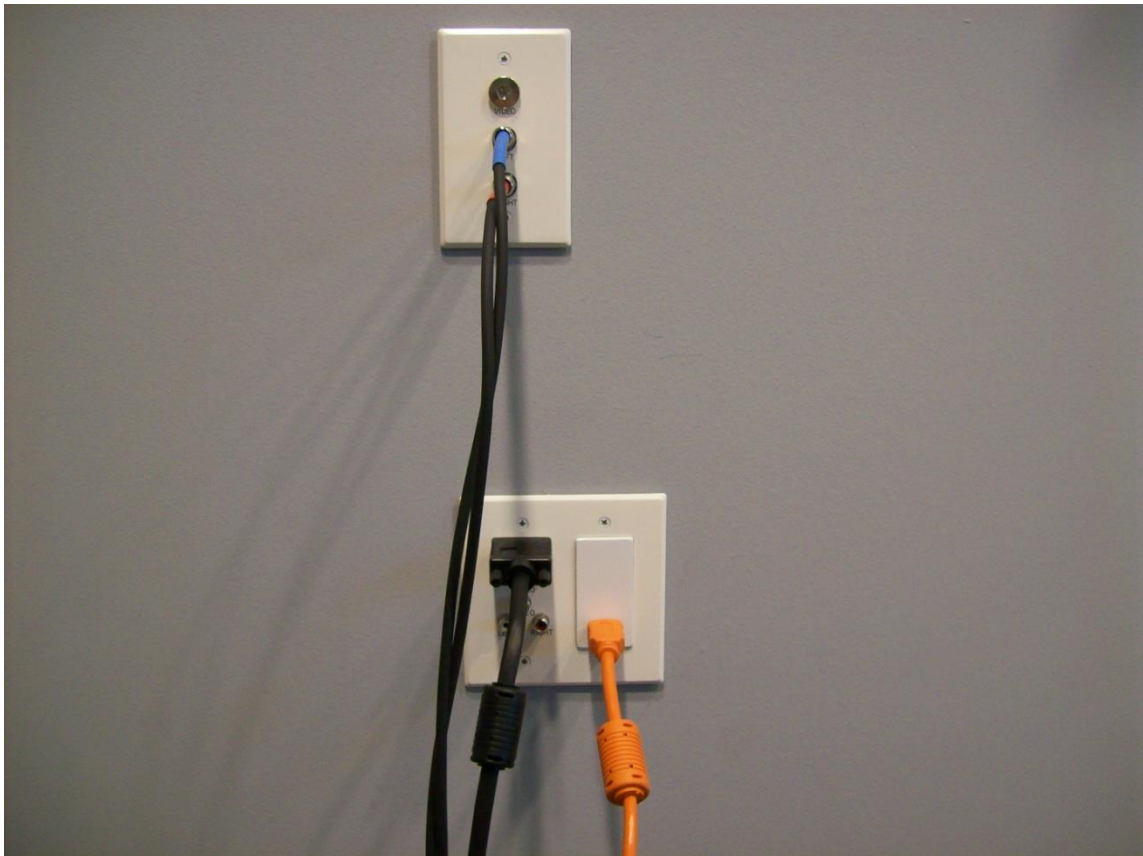Yellow: Handheld Mic
Green: D-band Wireless Mic
Blue: vacant
White: Laptop Audio Out
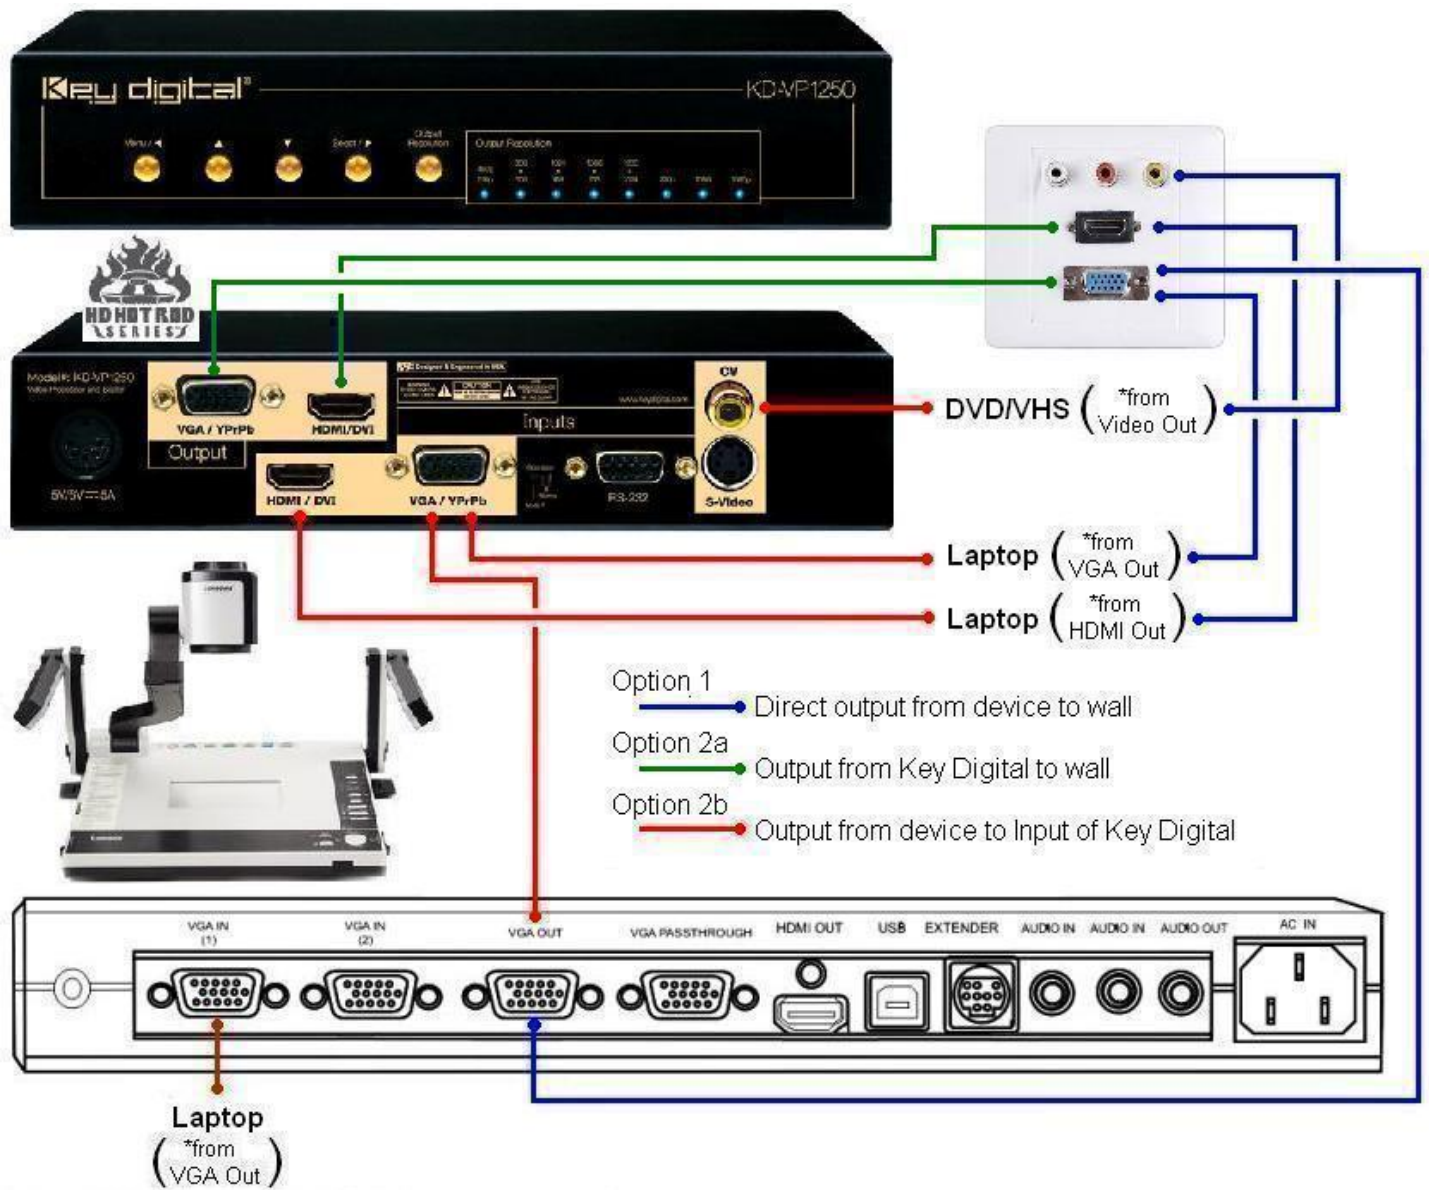Brown: DVD/VHS Player
Red: External

UCP Room 117 Connections

AV Cabinet #1 Audio Schematic
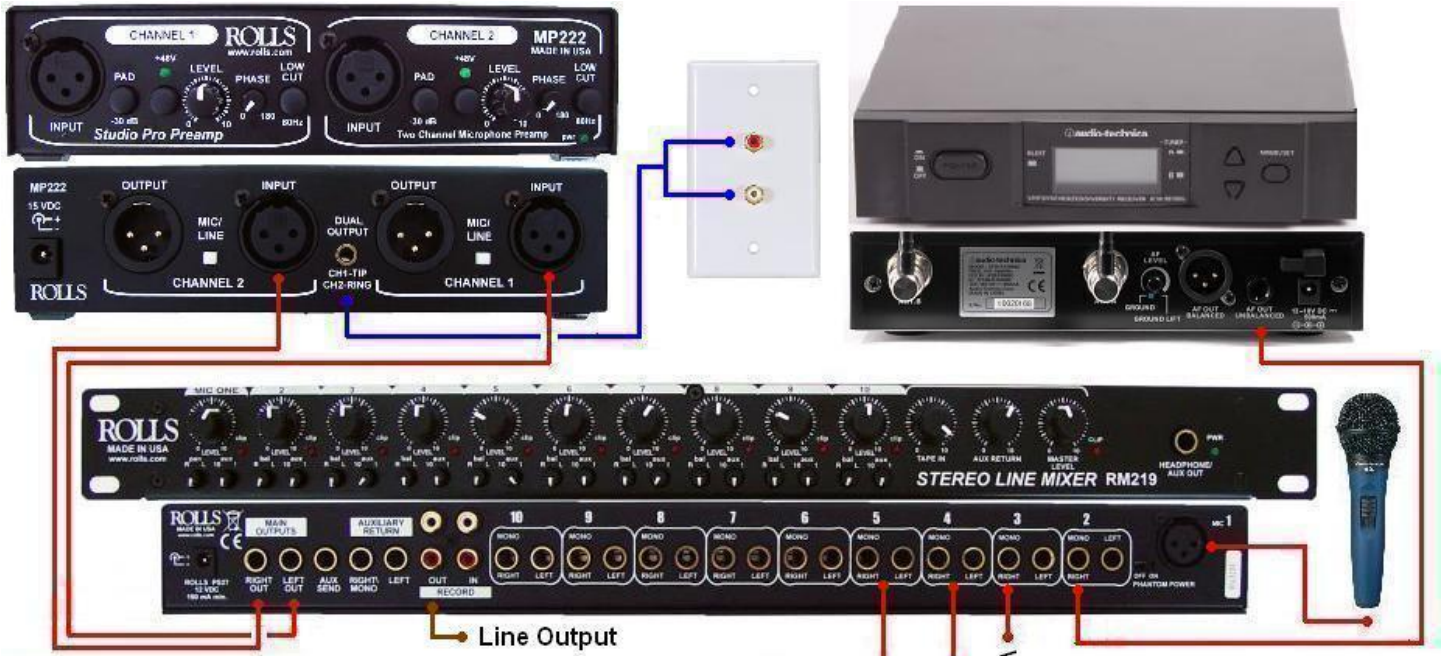
Line Output
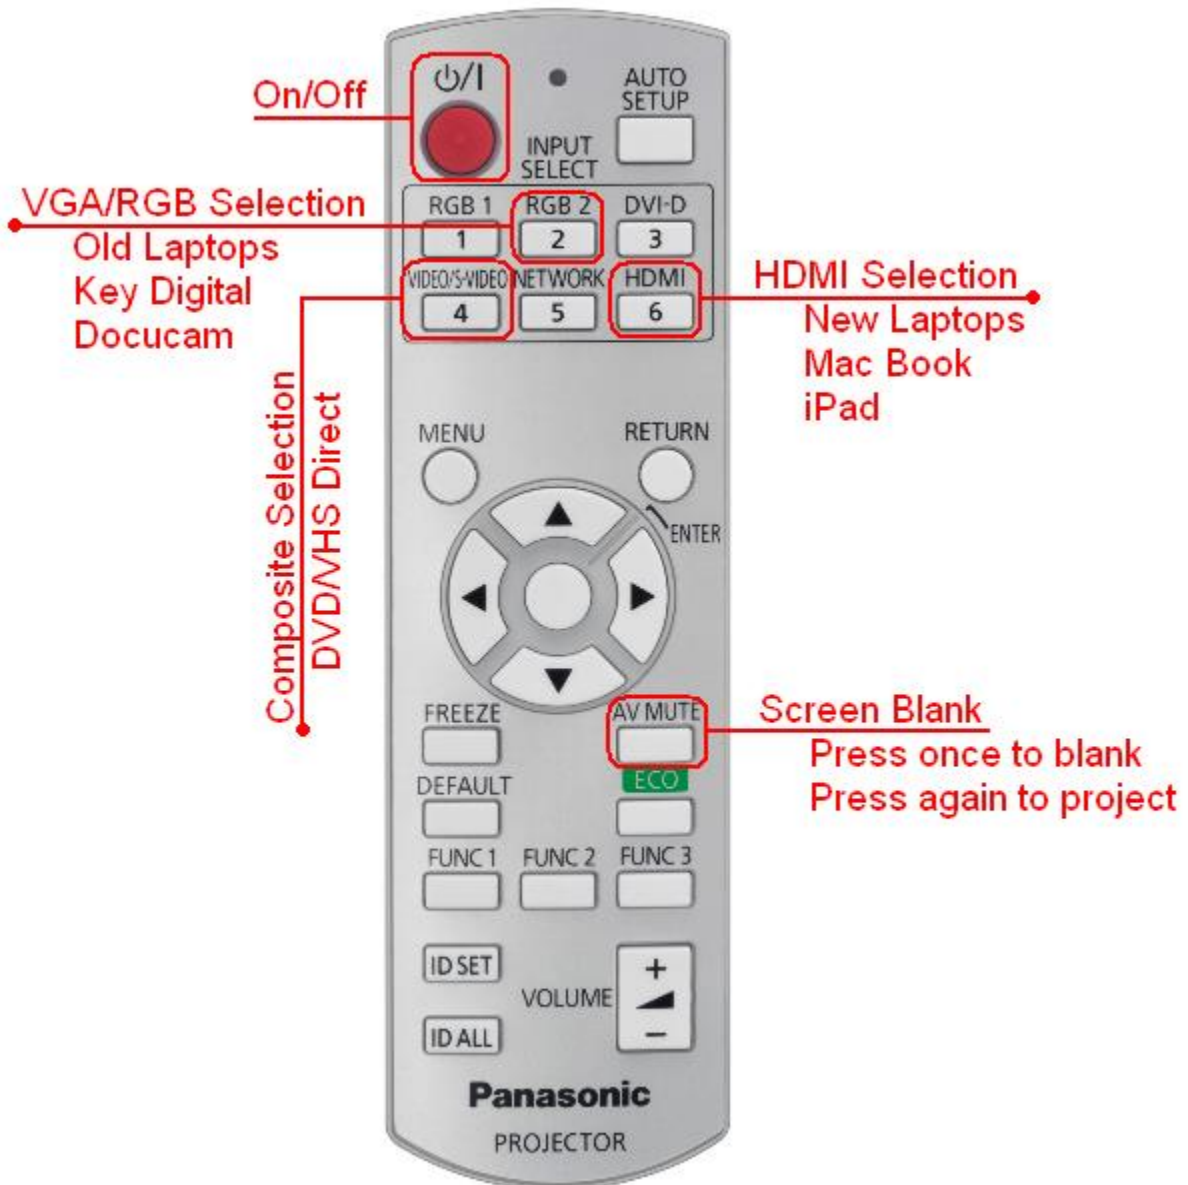
AV Cabinet #1

DVD/VHS (*from Line Out)

Laptop (*from Headphone Out)

Vacant

2013 OLLI-Reston AV Guide by Arman Majumder

Video Schematic

Option 1   Direct output from device to wall

Option 2a   Output from Key Digital to wall

Option 2b   Output from device to Input of Key Digital
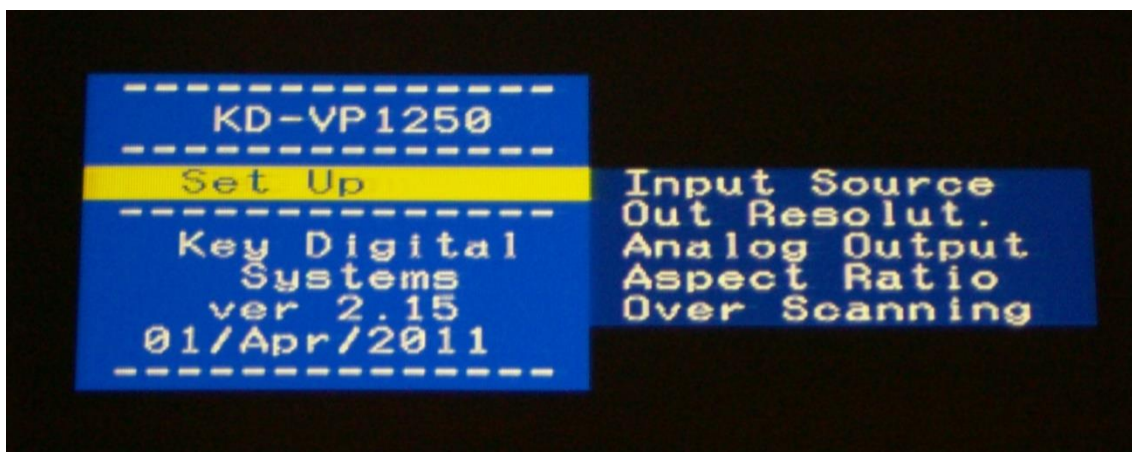
2014 OLLI-Reston AV Guide by Arman Majumder

UCP Projector Remote

Key Digital Video Processor (AV Cabinet #2)

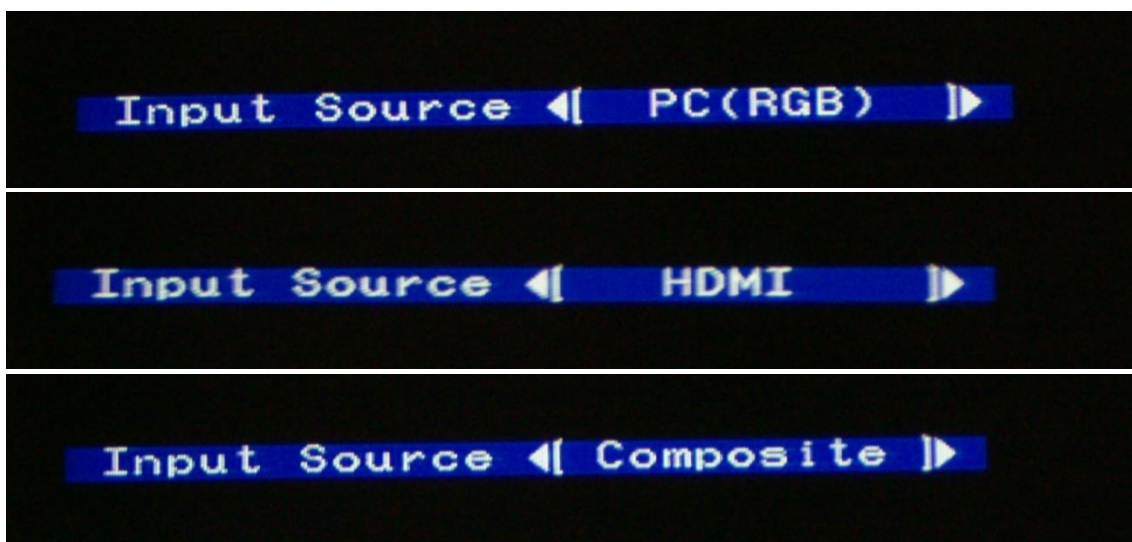Press **Menu** to enter settings

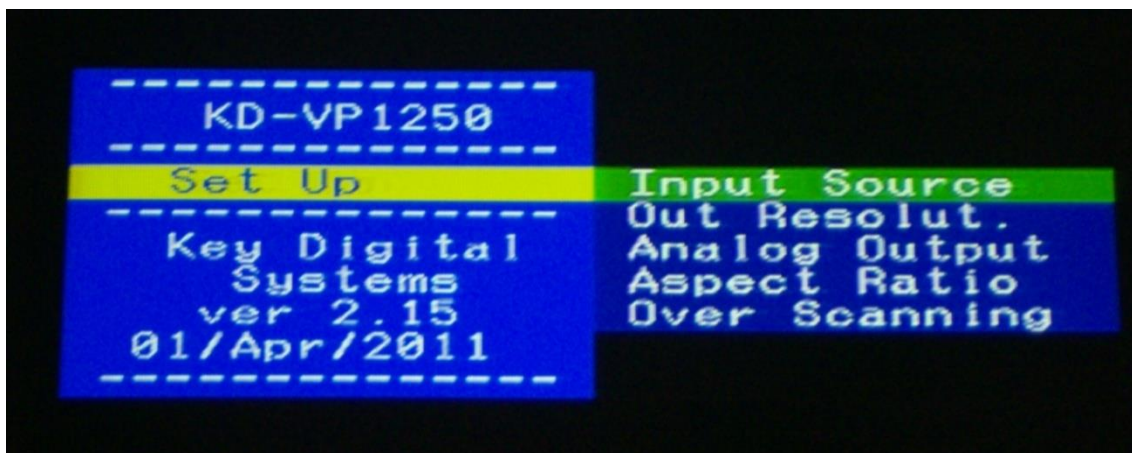Arrow over to **Input Source** and press **Select** to scroll through inputs.

PC (RGB) – VGA: Old Laptops, Docucam
HDMI: New Laptops, New DVD/VHS combo players
Composite: Old DVD/VHS combo players

Select desired input by pressing **Select**.

Press **Menu** to return to settings.

Press **Menu** again to exit settings.

If green tint appears on screen, press **R1**.

Audio-Technica Wireless Microphone System

Receiver is turned off. Press **POWER** to turn on.

Receiver is turned on but does not have a signal from transmitter (Body-Pak).
Transmitter (UniPak) is turned off.

Receiver has radio (RF) signal from transmitter (Body-Pak).
Transmitter (UniPak) is on Mute.

Receiver has radio (RF) and audio (AF) signal from transmitter (Body-Pak).

Transmitter (UniPak) is turned on and live.

Battery indicator shows full charge (4 bars) on Transmitter (UniPak).

Transmitter (UniPak) is turned off. Press and Hold **POWER/MUTE** to turn on.

 (Green Indicator)

Transmitter (UniPak) is turned on and live. Press and Hold **POWER/MUTE** Button to turn off. Battery indicator shows full charge (4 bars) on Transmitter (UniPak).

 (Red indicator)

Transmitter (UniPak) is on Mute. Press **POWER/MUTE** once to mute and once again to resume presentation.